

APPLICABLE OUTLETS 2-POLE UNEARTHED DEVICES The product is suitable for use with most electronic devices up to 2500W at Adapter can accept Type A, B, C, E, F, G, I, J, L, N plugs. 250V and 1000W at 100VIt can be used with a multitude of appliances such as:Laptops.Small travel hair dryers.Travel irons.Electric fan.Table lamp.

Flectric razors etc. Please check the safety data sheet or data plate on the device to find this Please notice that type D.H.K.M and O plugs are not accepted.

information before plugging it in.

Travel irone Electric fan Table lamn Electric rayore **USB DEVICES** Power bank etc.

Camera Smartphone Tablet Portable Game Console Rivetooth speaker

Features:

Attentions:

HOW TO USE THE ADAPTER

Safety function switch ensure only one plug energized.

other plug-pins are locked automatically.

Built-in multi-nation plugs can be selected to fit all outlets in different countries

Please make sure that the button is reset when the button is pushed out

pug has not been pushed in place and will affect the normal use. Only one plug-type can be used at one time by sliding the knob selection.

and retracted to the bottom, and if the button is not reset, it means that the

Slightly press the button and slide to the down for USA plug completely as shown make sure the contact blades are turned to the parallel position Recover the plug: press and hold the "USA" button to release and continue to pull up, until the plug completely pull the top and then

release the button, then the button will reset and lock the plug.

to the parallel position Recover the plug: press and hold the "AUST" button to release and continue to pull up, until the plug completely pull the top

and then release the button, then the button will reset and lock the plug.

Slightly press the button and slide to the down for UK plug completely as shown. Pull out the insulated ground nin from the housing. Recover the plug: press and hold the "UK" button to release

release and continue to pull up, until the plug completely pull

FUROPE

and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and

lock the plug. Slightly press the button and slide to the down for EUROPE plug completely as shown ,make sure the contact blades are turned to the parallel position. Recover the plug: press and hold the "EUROPE" button to

and lock the plug.

Slightly press the button and slide to the down for AUS plug

completely as shown, make sure the contact blades are turned

the top and then release the button, then the button will reset

